

INSTRUCTIONS FOR THE FOLLOWING FIXTURES
ORDER#
MODEL#

R41029

RENO-LEDT8BC-MW-MCCT-48G

INSTALLATION GUIDE

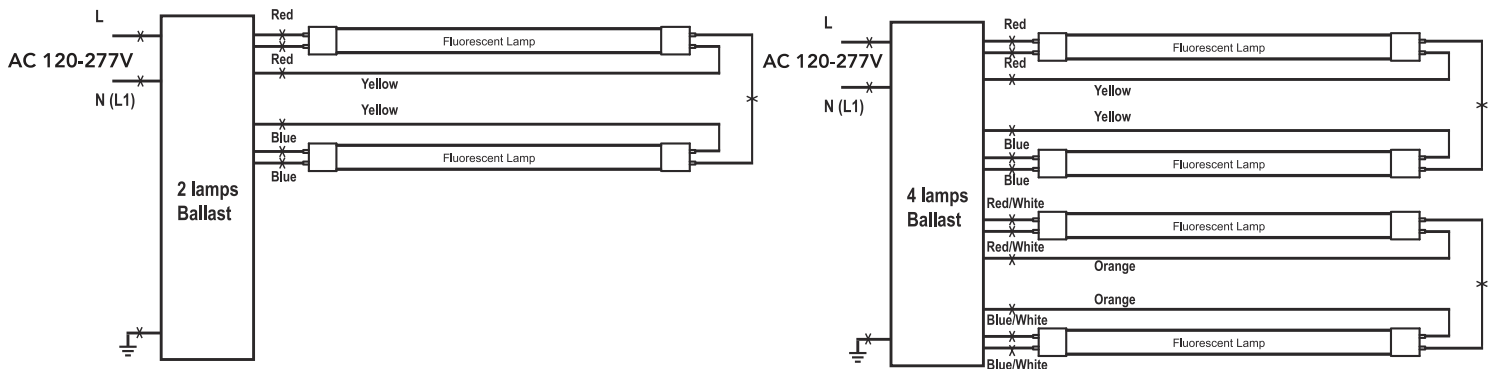
This guide provides important installation and safety information.

Please read all information before installing the lamps and keep this sheet for future reference.

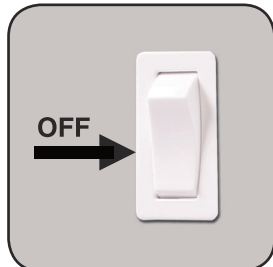
- Operates on Electronic Ballasts only.
- Risk of Fire: Do not install this lamp in a preheat luminaire.
- Risk of electronic shock - SUITABLE IN DAMP LOCATION.
- Any modifications to this product will void the warranty.



Typical Ballast Wiring. NOTE: Different Ballast may use different color wires.



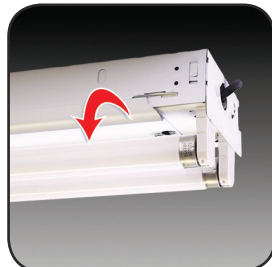
INSTALLATION INSTRUCTIONS

STEP 1.


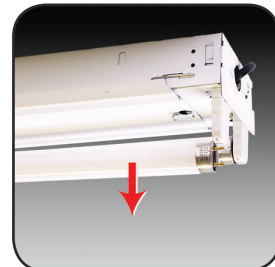
Turn off the power to the luminaire before removing the lamp.

STEP 2.

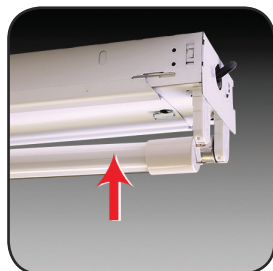

Remove the diffuser, lens cover or louver (if provided).

STEP 3A.


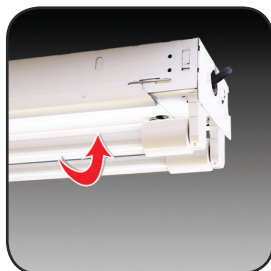
Remove the fluorescent lamp. First, rotate the lamp 90° degrees.

STEP 3B.


Then, remove the lamp from the lampholder.

STEP 4A.


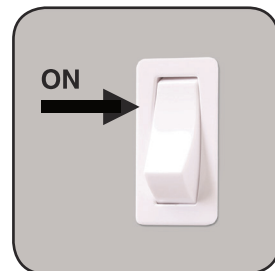
Insert the LED replacement lamp

STEP 4B.


Then, rotate the lamp 90° degrees.
Make sure that the pins are completely seated in the lampholders. One LED lamp for each fluorescent lamp removed.

STEP 5.


Repeat steps 3 and 4 as needed for additional lamps.
Replace the diffuser, lens cover or louver (if removed in step 2).

STEP 6.


Turn the power to the luminaire back on.

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT LAMP MANUFACTURER OR QUALIFIED ELECTRICIAN
THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS or NOT FOR EMERGENCY LIGHTING TYPE A LAMP - Intended for direct substitution of a fluorescent lamp and operating from the integral ballast without any modifications to the fluorescent luminaire
CAUTION - RISK OF ELECTRIC SHOCK. Do not use if outer lamp envelope is damaged or broken.

IMPORTANT SAFETY INFORMATION:

CAUTION RISK OF FIRE - IF THE LAMP OR LUMINAIRE EXHIBITS UNDESIRABLE OPERATION (BUZZING, FLICKERING, ETC.), IMMEDIATELY TURN OFF POWER, REMOVE LAMP FROM LUMINAIRE AND CONTACT MANUFACTURER
ATTENTION- RISQUE D'INCENDIE. SI LA LAMPE OU UN LUMINAIRE PRESENTE UN FONCTIONNEMENT INDESIRABLE (BOUDDONNEMENT, SCINTILLEMENT, ETC.), COUPER IMMEDIATEMENT L'ALIMENTATION, RETIRER LA LAMPE DU LUMINAIRE ET CONTACTER LE FABRICANT.

DO NOT INSTALL THIS LAMP IN A PRE-HEAT LUMINAIRE

THIS LAMP ONLY OPERATES ON ELECTRONIC BALLASTS. IF LAMP DOES NOT LIGHT WHEN THE LUMINAIRE IS ENERGIZED, REMOVE LAMP FROM LUMINAIRE AND CONTACT MANUFACTURER OR QUALIFIED ELECTRICIAN. THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXIT FIXTURES OR EMERGENCY EXIT LIGHTS.

Lamps must be operated within an ambient fixture temperature of -22°F and 133°F to ensure UL compliance.

