

UFO Highbay

RENO-SLEEK-HUB-DV-MW-MCCT

Installation Instructions

- Thank you for purchasing our UFO Highbay. Please read the below articles carefully to see how to use this product safely.
- Warning contents and attention contents related to product safety use, please be sure to follow it.

⚠ Warning

- This UFO High bay within the input voltage range:120-347VAC,50/60Hz.
- If input voltage exceeds this range, it may cause light failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -40°F(-40°C) through 122°F(50°C).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation process.

⚠ Attention

- IP rating: IP65, can work under wet locations.
- Please keep the UFO High bay away from any corrosive substance. When you clean it, please use damp or dry cloth.

Model Number	UHB1915-100W-XXX -X-XXXX(XX)	UHB1915-150W-XXX -X-XXXX(XX)	UHB1924-200W-XXX- X-XXXX(XX)	UHB1924-240W-XXX- X-XXXX(XX)
Power	100W	150W	200W	240W
Input Current	0.92A	1.38A	1.83A	2.2 A
CCT	XXX="XXXK" can be "35K", "40K", "50K", "57K", "65K"			
Input Voltage	AC120-347V			
Frequency	50/60HZ			
Power(TCP/TP)	60W/80W/100W	100W/125W/150W	100W/150W/200W	150W/200W/240W
Input Current(TCP/TP)	0.55A/0.74A/0.92A	0.92A/1.15A/1.38A	0.92A/1.38A/1.83A	1.38A/1.83A/2.2A
CCT((TCP/TC))	35K-40K-50K			

"XXX" can be any letter or number to represent light-emitting angle;
 "X" can be H, L or HY (Y=number) to represent lighting effect (no effect to power);
 "XXXX" can be XXXK, TCP, TP or TC. "XXXK" can be "35K", "40K", "50K", "57K", "65K"
 TCP=Adjustable power and CCT, TP=Adjustable power, TC=Adjustable CCT;
 "(XX)" can be (MS),(PIR),(BT) to indicate Microwave Sensor, PIR Motion sensor, Motion Sensor with Bluetooth or blank to indicate without Motion Sensor.

Installation Instruction


1. Hook type:

1.Tighten the hook clockwise.

2.Tighten the screw.

3.Hang the light.



4.Tighten the screw.

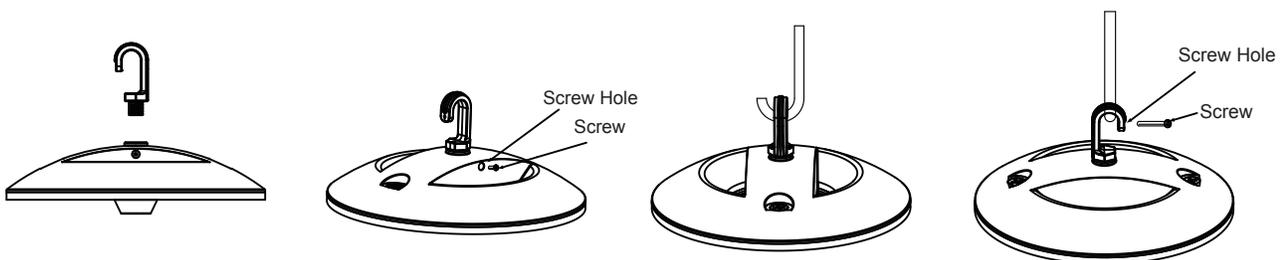


Date:	Project Name:
Type:	Part Number:

Product Dimension


Unit:mm

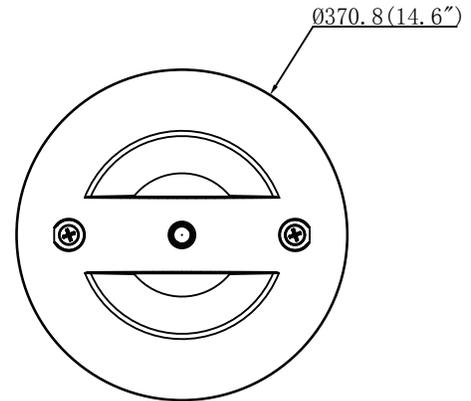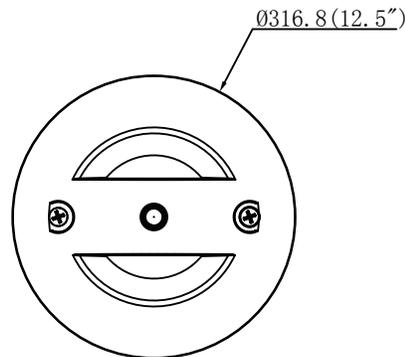

Hook:

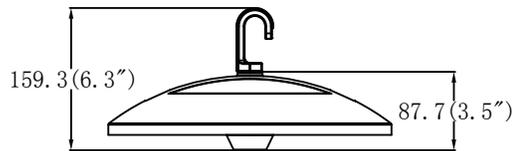

100W/150W

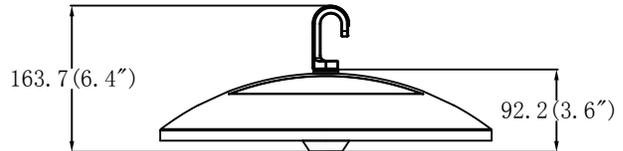

200W/240W

CCT and Watts selected Operation Manual:

A/B/C (Minimum / Middle / Maximum wattage) , NW/CW (CCT:35K/40K/50K)

1.Unscrew the plug

2.Switch power and color temperature

