


INSTRUCTIONS FOR THE FOLLOWING FIXTURES

ORDER#

MODEL#

R59456

RENO-TBSK

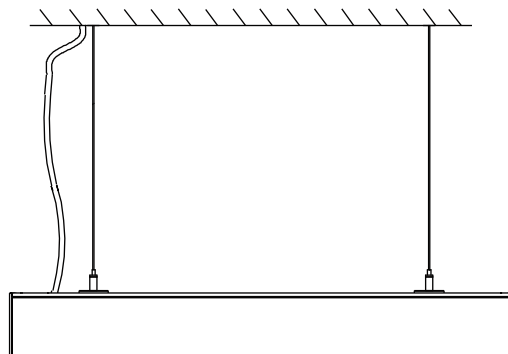

SAFETY INFORMATION


CAUTION! Risk Of Electrical Shock

Turn off all power prior to installation by switching off circuit breaker or removing fuse at fuse box.

- This product should be installed by a certified electrician in accordance with relevant federal, state and local building and electrical codes

COMMON FAILURES & SOLUTIONS

Common Failures	Solutions
Light is out	Ensure the lamp is well connected.
	Ensure the switch is turned on.
Flashing	Ensure the voltage is stable.
	Ensure the dimmer is compatible.

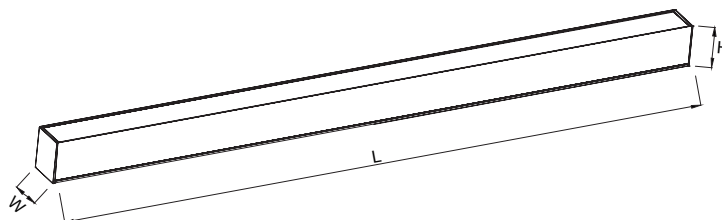


SIZE	L X W X H (mm)	L X W X H (Inch)
L600	608 X 55 X 73 mm	24 X 2.16 X 2.87"
L1200	1208 X 55 X 73 mm	48 X 2.16 X 2.87"
L2400	2408 X 55 X 73 mm	95 X 2.16 X 2.87"




T-BAR SUSPENSION INSTALLATION

 T-GRID BRACKETS 2 SETS	 CANOPY-A 1PCS	 CANOPY-B 1PCS
 WIRE GROMMET 1PCS	 TB4*8 SCREWS 4PCS	 HANGING CABLE SYSTEM*2


1 BEFORE INSTALLATION,
PLEASE TURN OFF THE SWITCH.

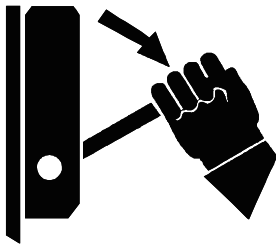


2 FIX THE BRACKETS ON T-GRID WITH SCREWS.

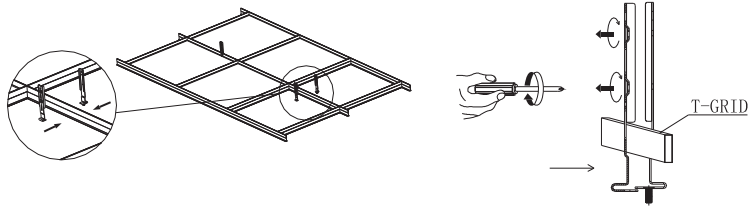


3 CONNECT THE BRACKETS, CANOPIES AND CABLE SYSTEM.

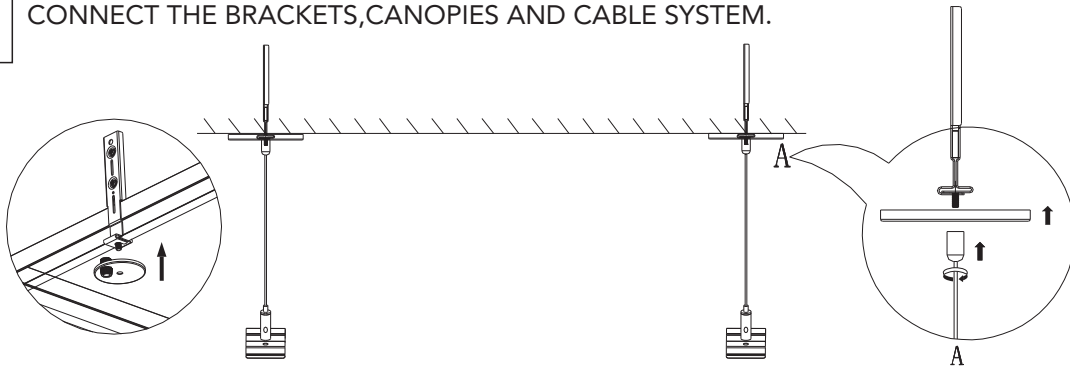

4 CONNECT THE INPUT LINE OF THE LIGHT FIXTURE WITH THE MAIN ELECTRICITY,
AND CONNECT THE DIMMING LINE INTO THE LEADS OF THE DIMMER AS PER CORRECT
WIRING GUIDELINES.

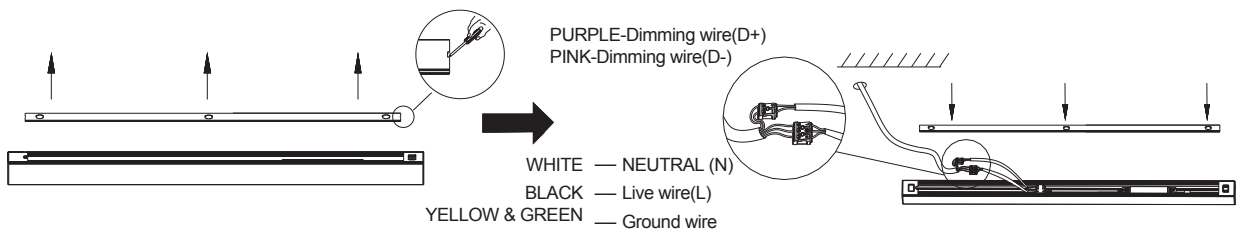


5 SNAP THE MOUNTING BRACKET ON THE SUSPENSION WIRE ONTO THE TOP OF THE LIGHT

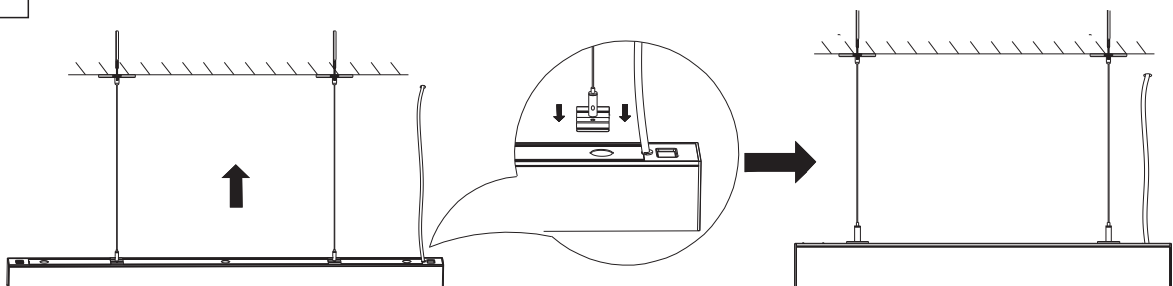

T-BAR SUSPENSION INSTALLATION

6

ADJUST THE SUSPENSION WIRE HEIGHT TO KEEP THE FIXTURE LEVELLED.

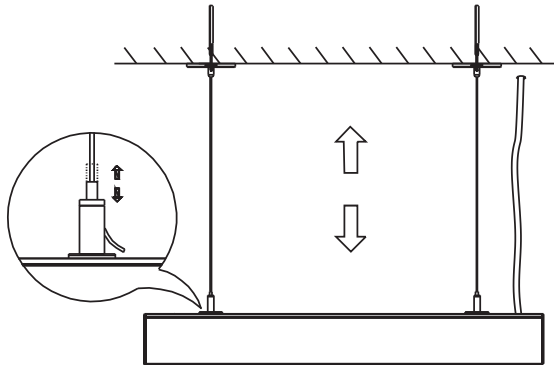

7

INSTALLATION COMPLETED.

