




RENOTM
LIGHTING

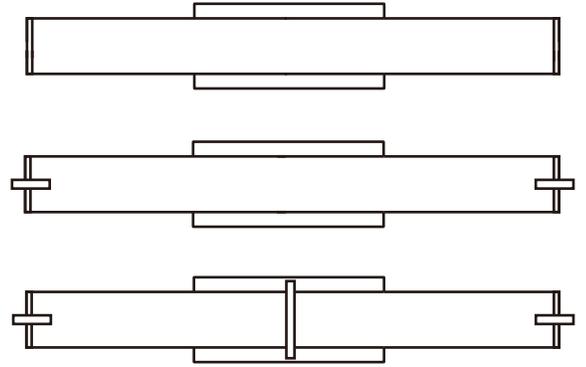

RENO-V2B-MW-MCCT

ALWAYS TURN OFF THE POWER SUPPLY FROM MAIN CIRCUIT BREAKER FIRST!

SAFETY:


This fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinance. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. To insure personal safety, proper grounding is required (connect green fixture wire to supply ground).

IMPORTANT:

Read all instructions carefully before attempting installation.

INSTALLATION STEP:


1. Turn off the power.
2. Choose CCT according to requirements.
3. Use screws(AA) to lock the mounting plate(BB) on the box.
4. Connect the ground wire on the back of the the mounting plate(BB)and the black and white wire on the back of the product with the screw cap(CC), connect to the corresponding line in the J-Box.
5. Align the round hole on the side of the lamp base with the round hole on the side of the mounting plate, and use DD screws to lock them respectively.
6. Turn on the power and check whether the lamps are working normally.



AA



BB



CC

