


INSTRUCTIONS FOR THE FOLLOWING FIXTURES:

ORDER#	MODEL#
R39125	RENO-TKH-MPC-WH
R39126	RENO-TKH-MPC-BK

Monopoint Canopy Installation Instructions H-Type 3-Wire

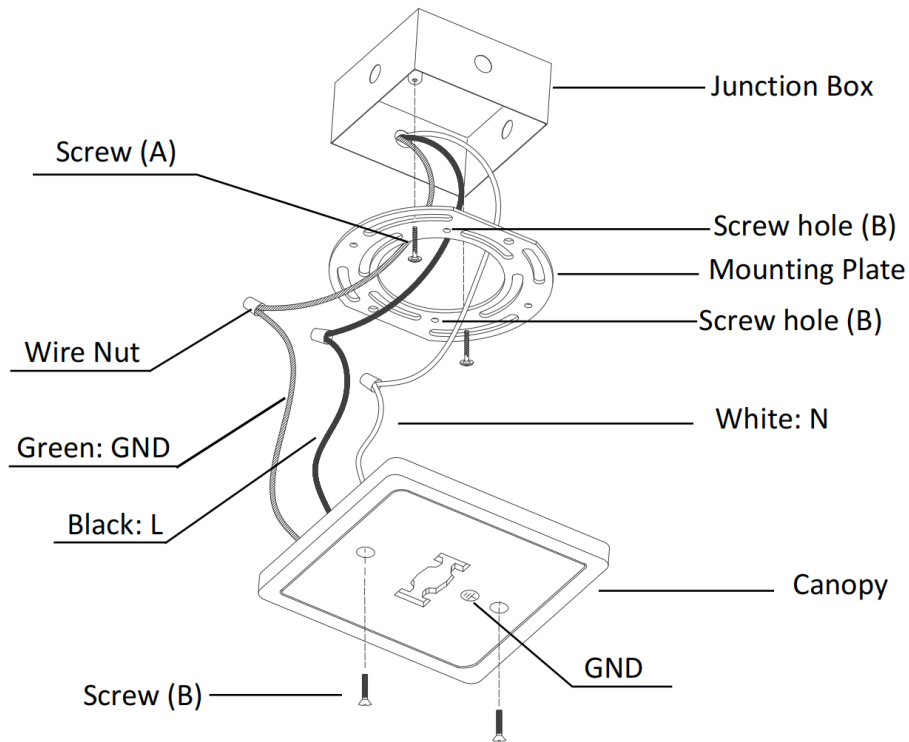


Step 1: Secure the mounting plate to the existing junction box using the provided screws (A).

Step 2: Draw the wires up through on the mounting plate and make connections to wires from the junction box. Connect the fixture wires to the supply wires using the provided wire nuts: Black to Black (Live), White to White (Neutral), Green to Green (Ground), Push wires back into the Junction Box.

Step 3: Use the provided screws (B) to lock the canopy to the screw hole (B) on the bracket plate and tighten it.

INSTALLING TRACK HEAD:

On one side of the monopoint, the opening is identified with a GND. This indicates the side with two contacts, which correspond to the contacts on the track head. Please pull down on the adapter case while pushing insert it vertically, and rotate clockwise 90° until it is locked in place.

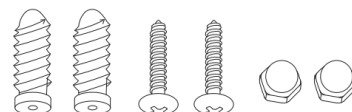

Spare for ceiling mount
(without junction box)